


**ASSEMBLE THE TRACKS AS SHOWN**

- ⊙ TRACK A: Pick up the track marked ③ ④ on both ends
- 1. Insert the end marked ④ into the side of the arch doorway of the main frame which is also marked ③
- 2. Insert the end marked ④ into the lower end of the stairs.
- ⊙ TRACK B: Pick up the track marked ④ ⑤ on both ends. Insert the end marked ④ into the upper end of the stairs.
- ⊙ TRACK C: Pick up the track marked ① ② ③ on both ends. This track should be joined with A and B track
- 1. Insert the end marked ① into the side of the arch doorway of the main frame which is also marked ①
- 2. The end marked ③ should be joined to the end of B track which is marked ③
- 3. Insert the rib marked ② to the slot on top of the arch doorway where ② is also marked

**DO NOT USE RECHARGEABLE BATTERIES**  
 Insert batteries with the correct (+) (-) polarity.  
 Rechargeable batteries are NOT to be used.  
 The end marked (+) (-) polarity.  
 The end marked (+) (-) polarity.  
 The end marked (+) (-) polarity.  
 The end marked (+) (-) polarity.

Have an adult install 1 "D" size (1.5) alkaline battery (not included). Uncover the battery cover and insert the battery in the correct (+) (-) position. Secure the battery cover screw before opening. See package for further battery information.

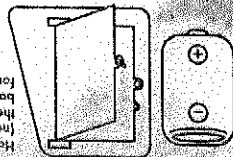

**KEEP THIS PACKAGING AS IT CONTAINS IMPORTANT INFORMATION**

**BATTERY OPERATED**  
 Use 1 "D" Battery (not include)